

# KPX-7 Keypad Programming Instructions – New Unit

## **1. Code Keypad to Receiver in Control Box (New unit only)**

- a. Press and hold SW1 button on Trio receiver.
- b. Press button 1 on keypad for 2 seconds, then release button1, then pause 2 seconds.
- c. Repeat step b.
- d. Release SW1 button on Trio receiver.

## **2. Set Master/Primary PIN – First Time**

- a. Press and hold *FCN* – Keypad will beep and flash, then release button.
- b. Enter Master PIN (4 digits only eg. 2345) and press *FCN*.
- c. Repeat step b.
- d. Keypad will beep and flash to indicate acceptance and return to normal mode.

## **3. Adding additional User PIN's**

- a. Press *FCN*
- b. Enter Master PIN, then press *FCN*.
- c. Press button '1', then press *FCN*.
- d. Enter user ID number (2-20), then press *FCN* three (3) times
- e. Enter 4 digit user PIN, then press *FCN*.
- f. Repeat step e. Keypad will beep and flash to indicate acceptance and return to normal mode.

## **4. Changing User PIN**

- a. Enter user PIN to change (4 digits only – 5<sup>th</sup> digit "1" not part of PIN).
- b. Press and hold *FCN* – Keypad will beep and flash, then release button.
- c. Enter new 4 digit PIN and press *FCN*.
- d. Repeat step c. Keypad will beep and flash to indicate acceptance and return to normal mode.

## **5. Deleting User PIN's**

- a. Press *FCN*.
- b. Enter master PIN (4 digits) and press *FCN*.
- c. Press button '2' followed by *FCN*.
- d. Enter user ID number (2-20) for PIN to be deleted, then press *FCN*.
- e. Repeat step d. Keypad will beep and flash to indicate acceptance and return to normal mode.

## **6. Clear Memory and Reload Factory Settings – Default PIN 0000**

- a. Press *FCN*, then enter Master PIN (4 digits), then press *FCN* again.
- b. Press '0', then press *FCN*.
- c. Enter '0000', then press *FCN*.
- d. Enter '0000', then press *FCN* again.
- e. All memory is now cleared. Master PIN is now '0000'. All user PIN's are deleted.  
Keypad is still coded to your receiver and the receiver will continue to respond to the keypad when new Master PIN and additional user PINS are set.

## **7. To Open Gate – Enter User PIN and press '1'**

**Note:** Additional information can be found in the Keypad instructions.

**WARNING!** If Master PIN is lost/forgotten the unit will have to be replaced with a new keypad.  
Always record Master PIN and other PIN No's with their user ID numbers and keep in a safe place.

# KPX-7 Keypad Programming Instructions – With Kit

Your Keypad has already been coded to Receiver in Control Box and Master/Primary PIN set to 2345 at ID 1.

## 1. To change Master PIN and reset all PIN No's – Do as follows

### **Clear Memory and Reload Factory Settings – Default PIN 0000**

- a. Press FCN, then enter Master PIN (4 digits), then press *FCN* again.
- b. Press '0', then press *FCN*.
- c. Enter '0000', then press *FCN*.
- d. Enter '0000', then press *FCN* again.
- e. All memory is now cleared. Master PIN is now '0000'. All user PIN's are deleted. Keypad is still coded to your receiver and the receiver will continue to respond to the keypad when new Master PIN and additional user PINS are set.

### **Set New Master/Primary PIN**

- f. Press and hold *FCN* – Keypad will beep and flash, then release button.
- g. Enter 2345 (Master PIN or your own Master PIN – 4 digits) and press *FCN*.
- h. Repeat step g.
- i. Keypad will beep and flash to indicate acceptance and return to normal mode.

**Note: Record all Master and User PINS on RECORD Sheet provided.**

## 2. **Adding additional User PIN's**

- a. Press *FCN*
- b. Enter Master PIN (4 digits) then press *FCN*.
- c. Press button '1', then press *FCN*.
- d. Enter user ID number (2-20), then press *FCN* three (3) times
- e. Enter 4 digit user PIN, then press *FCN*.
- f. Repeat step e. Keypad will beep and flash to indicate acceptance and return to normal mode.

## 3. **Changing User PIN**

- a. Enter user PIN to change (4 digits).
- b. Press and hold *FCN* – Keypad will beep and flash, then release button.
- c. Enter new 4 digit PIN and press *FCN*.
- d. Repeat step c. Keypad will beep and flash to indicate acceptance and return to normal mode.

## 4. **Deleting User PIN's**

- a. Press *FCN*.
- b. Enter Master PIN (4 digits) and press *FCN*.
- c. Press button '2' followed by *FCN*.
- d. Enter user ID number (2-20) for PIN to be deleted, then press *FCN*.
- e. Repeat step d. Keypad will beep and flash to indicate acceptance and return to normal mode.

## 5. **To Open Gate – Enter User PIN and press '1' (last '1' transmits to gate receiver)**

- Note:**
1. Your keypad coding and Master PIN is already done. Your **Master PIN** is now "2345" and coded to your gate receiver.
  2. Enter "2345" then "1" (to transmit to receiver) and your gate will open.
  3. To change Master PIN, do step 1. at top.
  4. Additional User PINs can be added as in item 2.
  5. Additional information can be found in the **Keypad** instructions.

**WARNING!** If Master PIN is lost/forgotten, the keypad will have to be replaced with a new keypad. Always record Master PIN and other PIN No's with their user numbers and keep in a safe place.

**Keypad - Master, User & PIN Numbers  
RECORD**

**Name:**

**Location:**

<b>ID Location:</b>	<b>User Name</b>	<b>PIN Number:</b>	<b>Transmit Channel: (CH#)</b>
1	MASTER/PRIMARY	2345	1
2			1
3			1
4			1
5			1
6			1
7			1
8			1
9			1
10			1
11			1
12			1
13			1
14			1
15			1
16			1
17			1
18			1
19			1
20			1