

# Coding of Transmitter CodeEzy 4ch Receiver



## Functions

1. To code REMOTES into receiver for momentary and latching control:

### Momentary

- a. Press Momentary button through hole in top of receiver:  
Once for channel 1 (Normally opens gate 1)  
Twice for channel 2  
3 times for channel 3  
4 times for channel 4

RED led will come on for approx 5 seconds.

When RED led goes off, press and hold remote button for 1-2 seconds for that function, RED led comes on again then goes off again to indicate coding was successful.

### Latching

- b. Press Latching button Twice through hole in top of receiver to programme Lock/Unlock for gate 1 lock.

RED led will come on for approx 5 seconds.

When RED led goes off, press and hold remote button for 1-2 seconds for that function, RED led comes on again then goes off again to indicate coding was successful.

NOTE: Latching is only used to Lock/Unlock gate.

2. To Code KEYPADS into receiver:

- a. Same as above except instead of remote use 1111# and hold # for 1-2 seconds. RED led goes off to indicate keypad channel 1 is coded in.
- b. Then repeat using 2222# to code in channel 2 of keypad.

## Erasing Remotes

To erase remote buttons from receiver, press and hold Momentary button, RED led comes on. Hold depressed until RED led flashes. Release button, RED led should go off  
All buttons should be erased.