

Re-installing Drive Unit

Re-fix drive unit to gate post/pillar and attach drive arms as before.

Single and Double Gates:

1. Disengage drive motor by lifting ring on pin and pushing motor towards gate post until gate swings freely.
2. Open gate to open position and adjust LOWER cam so it depresses actuator until you here a click. This is where the gate will stop when opening.

Single Gate:

3. On a **SINGLE** gate, close gate until it hits the stop bracket. At this point adjust the TOP cam so there is a 2mm clearance between the TOP cam and the roller on the TOP micro switch actuator. This clearance will provide sufficient movement of the shaft to lock in the stop bracket.

Double Gate:

4. On a **DOUBLE** gate, close gate until you here the click of the TOP cam on the TOP micro switch, this is where it will stop when closing.

Some minor adjustment may be required to fine tune open and closed positions when under power.

Note: If gate opens clockwise RED wire from motor should be in terminal 5 and YELLOW wire from motor should be in terminal 2.

If gate opens anti-clockwise swap Red and Yellow wires from motor so RED wire is in terminal 2 and YELLOW wire is in terminal 5.